


Specifications


ENGINE NUMBER

The engine number is stamped on the right side of the cylinder block.

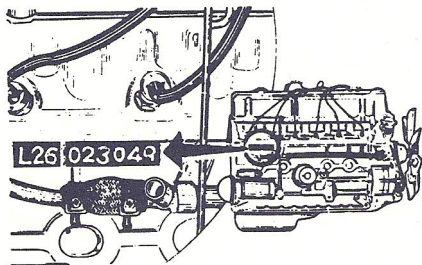

CHASSIS NUMBER

The chassis number is stamped on the upper face of the left dash panel.

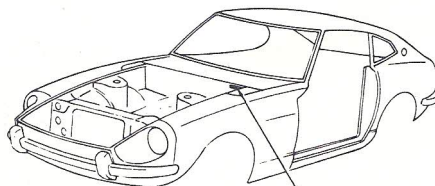


CHASSIS NUMBER

SP057

CAR IDENTIFICATION PLATE

The car identification plate is located on the left hood ledge panel at the back of strut housing.

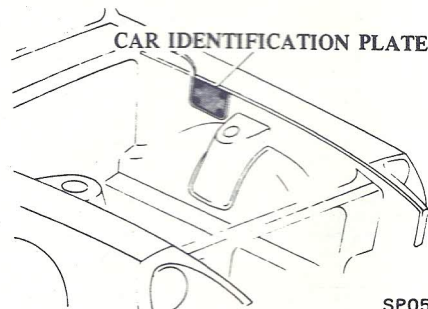

SP053

Specifications

GENERAL SPECIFICATIONS

DIMENSIONS		2 seater	2+2 seater
	mm (in)		
Overall length		4,135 (162.8)	4,445 (175.0)
Overall width		1,630 (64.2)	1,650 (65.0)
Overall height (unladen)		1,280 (50.4)	1,295 (51.0)
Wheelbase		2,305 (90.7)	2,605 (102.6)
WEIGHTS			
Curb weight			
Manual transmission	} kg (lb)	1,175 (2,591)	1,245 (2,745)
Automatic transmission			
Seating capacity		2	2+2
ENGINE		L26, O.H.C. Twin-carburetor 6-cylinder, Gasoline	
TRANSMISSION		Manual 5-speed, floor shift Gear ratio 1st 2.906, 2nd 1.902 3rd 1.308, 4th 1.000 5th 0.864, Rev. 3.382 Automatic, floor shift Gear ratio 1st 2.458, 2nd 1.458 3rd 1.000, Rev. 3.382	
WHEEL and TIRE		175HR-14 with tube with 5J-14 wheels 195/70VR-14 with tube with 5J-14 & 5½J-14 wheels	

ENGINE DATA

80

Specifications

Fan belt tension	mm (in)	8 to 12 (0.31 to 0.47)
Fan belt size (Wider width x Length)	mm (in)	13 x 885 (0.51 x 34.84)

* For cars without air conditioners. Idle speed of models equipped with air conditioner is 150 rpm higher than indicated values when F.I.C.D. is ON.

CAPACITIES

	Liter	US measure	Imp measure
Fuel tank	65	17 ¼ gal	14 ¾ gal
Cooling system *1	9.65	10 ¼ qt	8 ½ qt
Engine oil *2	4.7	5 qt	4 ⅛ qt
Transmission case			
Manual	2.0	4 ¼ pt	3 ½ pt
Automatic	5.5	5 ⅞ qt	4 ⅞ qt
Windshield washer tank	1.5	1 ⅝ qt	1 ¾ qt
Air conditioning			
Compressor oil	g (oz)	270 (9.52)	
Refrigerant	kg (lb).....	0.6 to 0.9 (1.3 to 2.0)	

*1 Including 0.8 liter (⅞ US qt, ¾ Imp qt) required for heater.

*2 Including 0.7 liter (¾ US qt, ⅝ Imp qt) required for oil filter.

NOTES:

Original Owner's Name: Phone Number:

Owner's Address:

Purchase Date:

Dealer's Name: Phone Number:

Dealer's Address:

Car Model: Color:

Chassis Number:

Engine Number:

Registration Number: Key Number:

Subsequent Owner's Name: Phone Number:

Owner's Address:

Purchase Date:


Odometer Reading Shown on Speedometer on Day of Purchase:

.....

.....

.....

.....

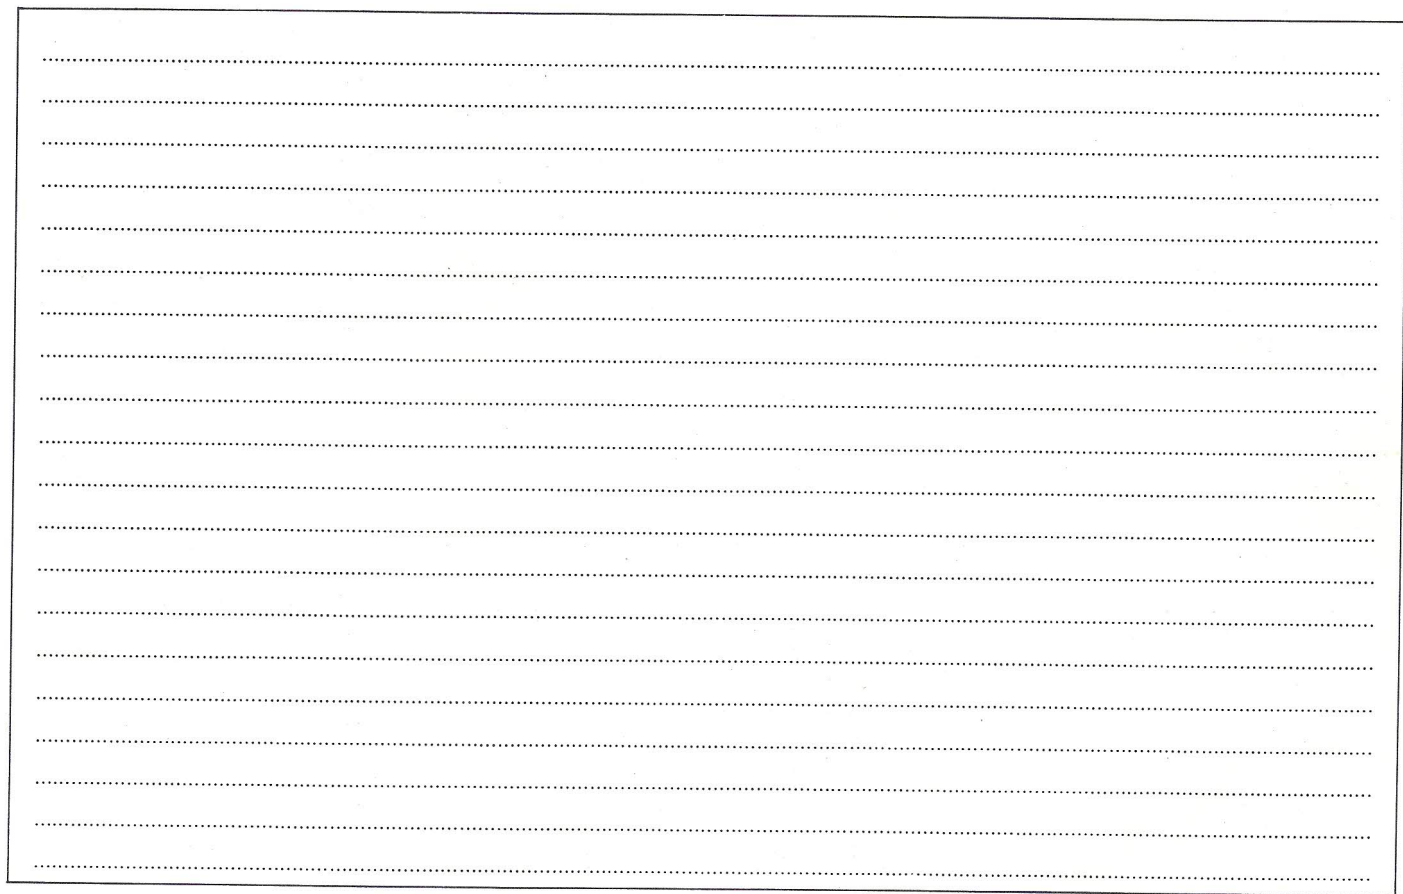


Index

ACCELERATOR PEDAL	10	HAZARD WARNING FLASHER	38	SAE VISCOSITY NUMBER	45
AIR CLEANER ELEMENT	48	HAZARD WARNING SWITCH	10, 15	SAFETY CHECKS	2
AIR CONDITIONER	30, 31	HEADLIGHT BEAM INDICATOR LIGHT	13	SEAT BELTS	5, 6, 7
ASH TRAY	10, 33	HEATER	10, 28, 29, 30	SEATS	4, 5
AUTOMATIC TRANSMISSION	23, 24	HOOD LOCK	46	SERVICE STATION	
AUTOMATIC TRANSMISSION FLUID	47	HOOD LOCK HANDLE	10	INFORMATION	Back covered page
BATTERY ELECTROLYTE LEVEL	43	HORN	10, 15	SIDE VENTILATOR	10
BRAKE AND CLUTCH FLUID	42	HOW TO START THE ENGINE	19	SPARE TIRE AND TOOL/JACK	
BRAKE PEDAL	10, 50	IGNITION SWITCH AND STEERING		STOWAGE	57, 58
BRAKE WARNING LIGHT	13	LOCK	3, 10, 20	SPARK PLUGS	48
BREAK-IN SCHEDULE	18	ILLUMINATION CONTROL KNOB	10, 13	SPEEDOMETER	10, 11
BULB REPLACEMENT	51, 52, 53	INSPECTION LAMP	37	STARTING THE ENGINE	19 to 22
BULB SPECIFICATIONS	54	INSTRUCTIONS FOR EMISSION CONTROL		STRAP HANGER	34, 35
CARBURETOR DAMPER OIL	48	MAINTENANCE SERVICE	69 to 72	SUN VISOR	34
CARE OF ALUMINUM WHEELS	57	INTERIOR LAMP	34, 35	SWITCHES	
CAR IDENTIFICATION PLATE	78	JUMP STARTING WITH BOOSTER		Hazard warning switch	10, 15
CHANGING WHEEL	56	BATTERY	39	Ignition switch	3, 10, 20
CHARGE WARNING LAMP	10, 12	KEYS		Light switch	10, 14
CHASSIS NUMBER	78	Door locks	3	Passing light switch	14
CHILD RESTRAINT	8	Fuel filler lid lock	3, 4	Rear defogger switch	10, 31
CHOKE CONTROL LEVER	10, 16	Glove box lock	3, 10, 36	Turn signal switch	14
CHOKE WARNING LAMP	10, 16	Ignition switch and steering lock	3, 10, 20	Wiper and washer switch	10, 15
CIGAR LIGHTER	10, 33	Tailgate key lock	3, 36	TACHOMETER	10, 13
CLEANING YOUR CAR	58, 59	LIGHT SWITCH	10, 14	TAILGATE KEY LOCK	3, 36
CLOCK	10, 33	LUGGAGE BELT	36	TIPS ON DRIVING	24, 25
CLUTCH PEDAL	10, 50	MANUAL TRANSMISSION	22, 23	TIRE INFLATION PRESSURES	44
COAT HANGER	35	MAP LAMP	10, 34	TIRE ROTATION	55
COOLING FAN BELT	48	METERS AND GAUGES		TOWING	38
DASH SIDE VENTILATOR KNOB	10, 17	Fuel gauge	10, 12	TRANSMISSION CONTROL LEVER	10
DISTRIBUTOR BREAKER POINT	49	Oil pressure gauge	10, 11	TRANSMISSION SELECT LEVER	10
DOOR LOCKS	3	Speedometer	10, 11	TRIP ODOMETER RESET CONTROL	10
EMISSION CONTROL MAINTENANCE		Tachometer	10, 13	TURN SIGNAL INDICATOR LIGHTS	13
SCHEDULE	68	Water temperature gauge	10, 11	TURN SIGNAL SWITCH LEVER	
EMISSION CONTROL SYSTEM	63 to 67	MINOR MAINTENANCE	46 to 54	AND HIGH BEAM LEVER	14
EMISSION CONTROL TROUBLE		OIL AND FUEL RECOMMENDATION	44, 45, 46	VENTILATION SYSTEM	27
SHOOTING CHART	73 to 76	OIL PRESSURE GAUGE	10, 11	VOLTMETER	10, 11, 12
EMISSION LABEL	77	OPENING THE HOOD	40	WARNING AND INDICATOR LIGHTS	
ENGINE COOLANT LEVEL	42	OPENING THE INSPECTION LID	40	Brake warning light	13
ENGINE COOLING SYSTEM	47	PARKING BRAKE LEVER	10, 16, 50	Hazard warning flasher	38
ENGINE NUMBER	78	PASSING LIGHT SWITCH	14	Headlight beam indicator light	13
ENGINE OIL AND OIL FILTER	49	PERIODIC MAINTENANCE AND		Rear defogger indicator lamp	10
ENGINE OIL LEVEL	41	LUBRICATION SCHEDULE	60, 61	Turn signal indicator lights	13
FOOT REST	10, 35	PUSH STARTING	39	WATER TEMPERATURE GAUGE	10, 11
FREEDING AN IMMOBILIZED CAR	38	RADIO	10, 32	WHEEL AND TIRE	54 to 58
FUEL FILLER LID LOCK	3, 4	REAR DEFOGGER INDICATOR LAMP	10	WINDOW CONTROL	35
FUEL GAUGE	10, 12	REAR DEFOGGER SWITCH	10, 31	WINDSHIELD WASHER FLUID	43
FUSE	51	REARVIEW MIRRORS	9	WINDSHIELD WIPER BLADES	49
GENERAL SPECIFICATIONS	79, 80, 81	RECOMMENDED LUBRICANTS	46	WINDSHIELD WIPER AND WASHER	
GLOVE BOX	3, 10, 36	ROUTINE SERVICE	41 to 44	SWITCH	10, 15
				WIRING DIAGRAM	85

SERVICE STATION INFORMATION

FUEL RECOMMENDATION

Use a proper grade gasoline of above 88 octane number. See page 44.

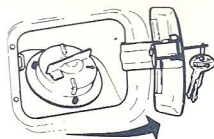

ENGINE OIL ①

Check oil level at each fuel stop. Use only recommended engine oil and fill to the line "H" on dipstick. See page 46 for oil quality and page 45 for oil viscosity.

BRAKE OIL ②

Check fluid level in brake reservoir. Use only recommended brake fluid. See page 46.

WINDSHIELD WASHER ③


Check fluid level in windshield washer tank.

RADIATOR COOLANT ④



Check coolant level.

BATTERY ⑤

Check fluid level monthly.

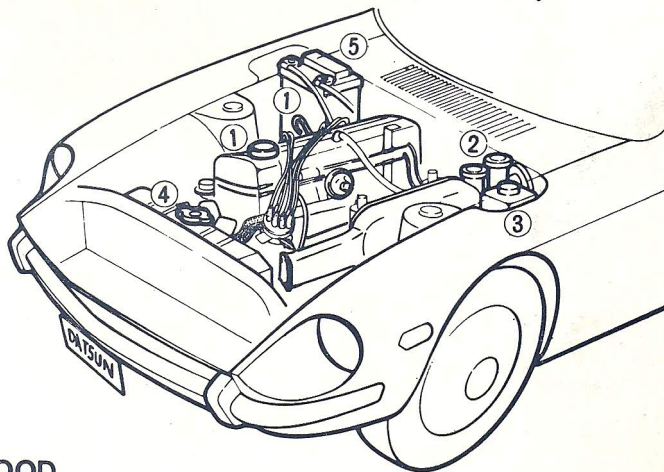

OPENING THE HOOD

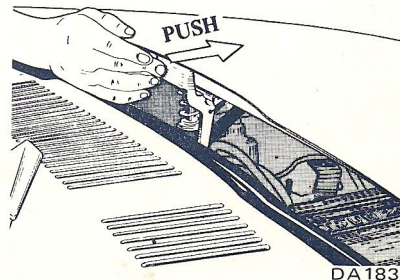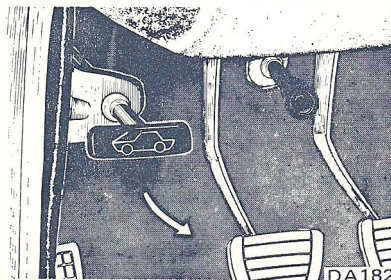

TIRE INFLATION PRESSURE

Keep inflated to pressures shown on

tire placard affixed to front door side panel of your car.

S30-H



NISSAN

DATSUN

Issued: March 1976 (010110)
Printed in Japan Publication No. OM6E-0S30A0

NISSAN MOTOR CO., LTD. Tokyo, Japan