

DATSUN 280Z
MODEL S30 SERIES



NISSAN MOTOR CO., LTD.
TOKYO, JAPAN

SECTION CO

COOLING SYSTEM

CO

COOLING SYSTEM.....	CO- 2
SPECIFICATIONS	CO- 7
TROUBLE DIAGNOSES AND CORRECTIONS	CO- 8

COOLING SYSTEM

CONTENTS

DESCRIPTION	CO-2	THERMOSTAT	CO-5
COOLANT LEVEL	CO-3	REMOVAL AND INSTALLATION	CO-5
DRAINING AND FLUSHING THE COOLING SYSTEM	CO-3	INSPECTION	CO-5
WATER PUMP	CO-3	RADIATOR	CO-5
REMOVAL AND INSTALLATION	CO-3	REMOVAL AND INSTALLATION	CO-6
DISASSEMBLY	CO-3	INSPECTION	CO-6
INSPECTION AND ADJUSTMENT	CO-3	RADIATOR RESERVOIR TANK	CO-6
TEMP-COUPLING	CO-4	OPERATION	CO-6
INSPECTION	CO-5	INSPECTION	CO-7
		REMOVAL AND INSTALLATION	CO-7

DESCRIPTION

The cooling system is of the conventional pressure type. A centrifugal pump built in the front cover of the engine serves to circulate the coolant. The pressure type radiator filler cap

installed on the radiator operates the cooling system at higher than atmospheric pressure. The higher pressure raises the boiling point of the coolant and increases the cooling efficiency of the radiator. When the thermostat is

closed, the coolant remains in the cylinder head and block for swift warming up of the engine. After it reaches the normal operating temperature, the coolant circulates through the radiator.

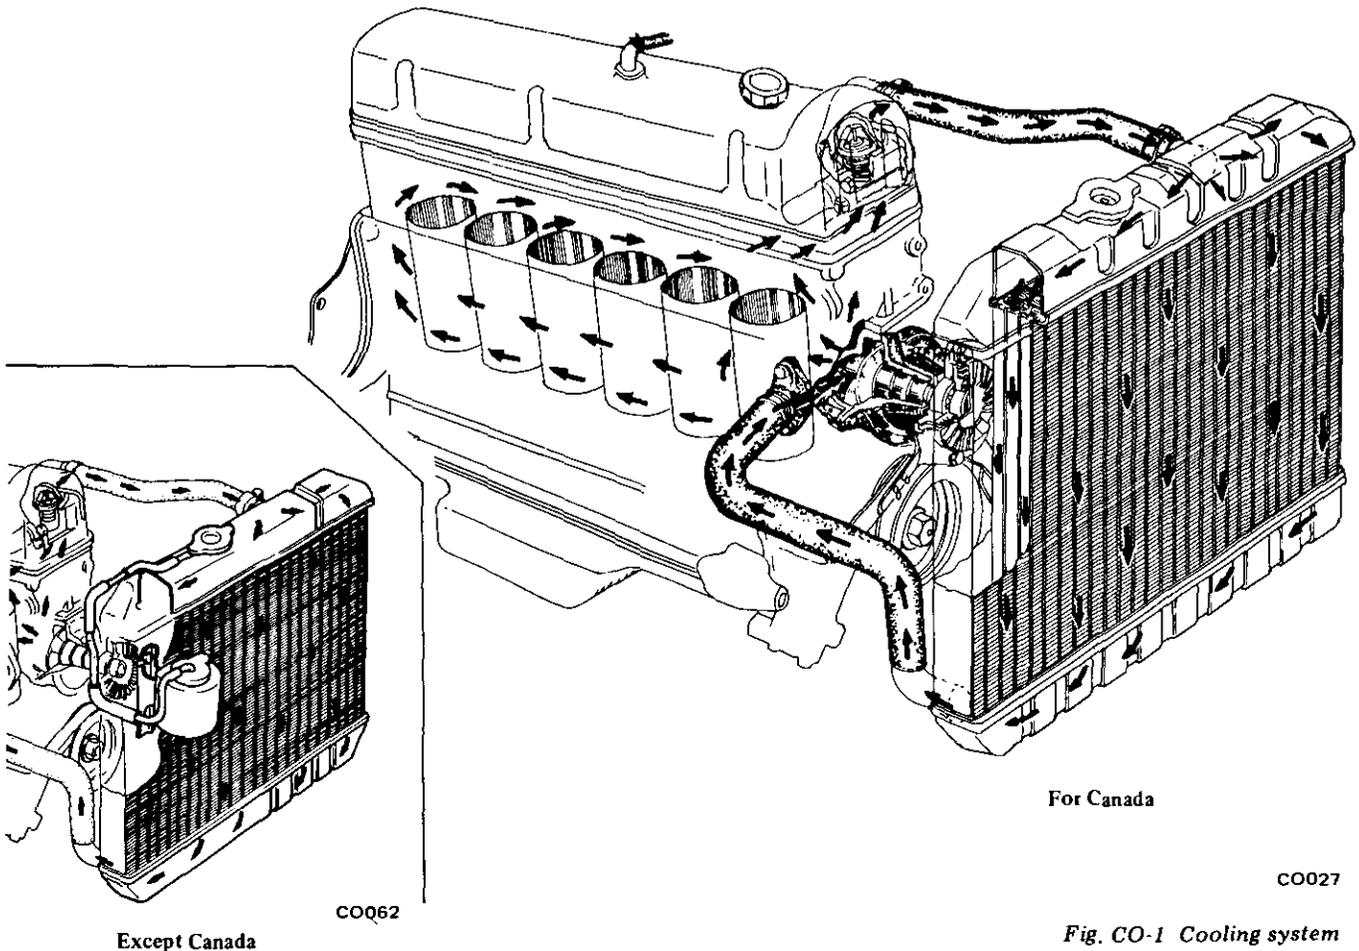


Fig. CO-1 Cooling system

COOLANT LEVEL

The coolant level should be checked and maintained as follows:

About 40 mm (1.575 in) below the bottom of filler neck.

CAUTION: To avoid serious personal injury, never remove radiator cap quickly when engine is hot. Sudden release of cooling system pressure is very dangerous.

If it is necessary to remove radiator cap when radiator is hot, turn cap slowly counterclockwise to the first stop. After all pressure in the cooling system is released, turn cap passing the stop and remove it.


DRAINING AND FLUSHING THE COOLING SYSTEM

To drain the cooling system remove radiator cap, release drain cock at the bottom of radiator and drain plug on the side of cylinder block. If heater system is installed, set heater temperature control valve to open position. After the coolant is drained completely, close drain cock and plug and refill the system with clean soft water.

WATER PUMP

The water pump is of a centrifugal type, which is mounted on the engine front cover. The fan and pulley are bolted at the pulley hub. The pump shaft is supported by a double row of ball bearings press fit in an aluminum die cast pump body. The bearings are permanently lubricated and sealed to prevent loss of lubricant and entry of dirt.

The pump contains an impeller that turns on a steel shaft which rotates in the ball bearings, and the volute chamber is built in the front cover assembly. The inlet of the pump is connected to the radiator's lower tank by a hose.

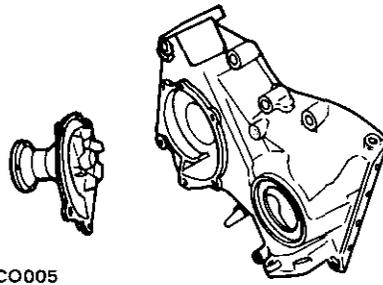

CO005


Fig. CO-2 Water pump and front cover

REMOVAL AND INSTALLATION

Removal

1. Drain coolant into a clean container.
2. Loosen bolts retaining fan shroud to radiator and remove shroud.
3. Loosen belt, then remove fan blade and pulley from hub.
4. Remove pump assembly and gasket from front cover.

Note: Prior to removing water pump, clean the cooling system with suitable cleaner.

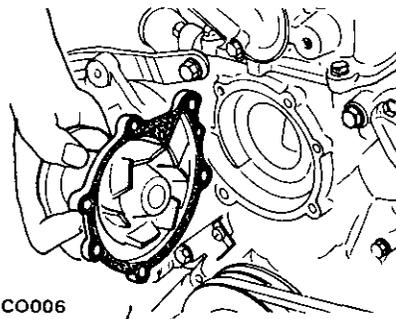

CO006

Fig. CO-3 Removing water pump

Installation

1. Be sure to clean the gasket surfaces in contact with pump and front cover. Always use new gaskets when installing pump assembly. Be sure to tighten bolts.
2. Fill cooling system and check for leaks at pump.
3. Install fan pulley and fan blade, and tighten fixing bolts securely. Install belt and adjust for proper tension.

DISASSEMBLY

Water pump is made of aluminum and its bearing outer race is of a press fit type. For this reason, water pump should not be disassembled.

INSPECTION AND ADJUSTMENT

Inspection

Inspect pump assembly for the following conditions and replace if necessary.

1. Badly rusted or corroded body assembly and vane.
2. Excessive end play or roughness of bearings in operation.

Note: If excessive mechanical seal squeak occurs when engine is running, use suitable water pump seal lubricant to prevent squeak.

Adjustment


Fan belt should be properly adjusted at all times. A tight belt causes wear of alternator and water pump bearings. A loose belt brings about improper cooling fan, water pump, and alternator operation.

Check the belt slack between alternator and fan pulley by force of 10 kg (22 lb).

Slackness of fan belt:
8 to 12 mm
(0.315 to 0.472 in)

If adjustment is necessary, loosen bolt retaining alternator adjusting bar to alternator. Move alternator toward or away from engine until the correct tension is obtained.

TEM-COUPLING

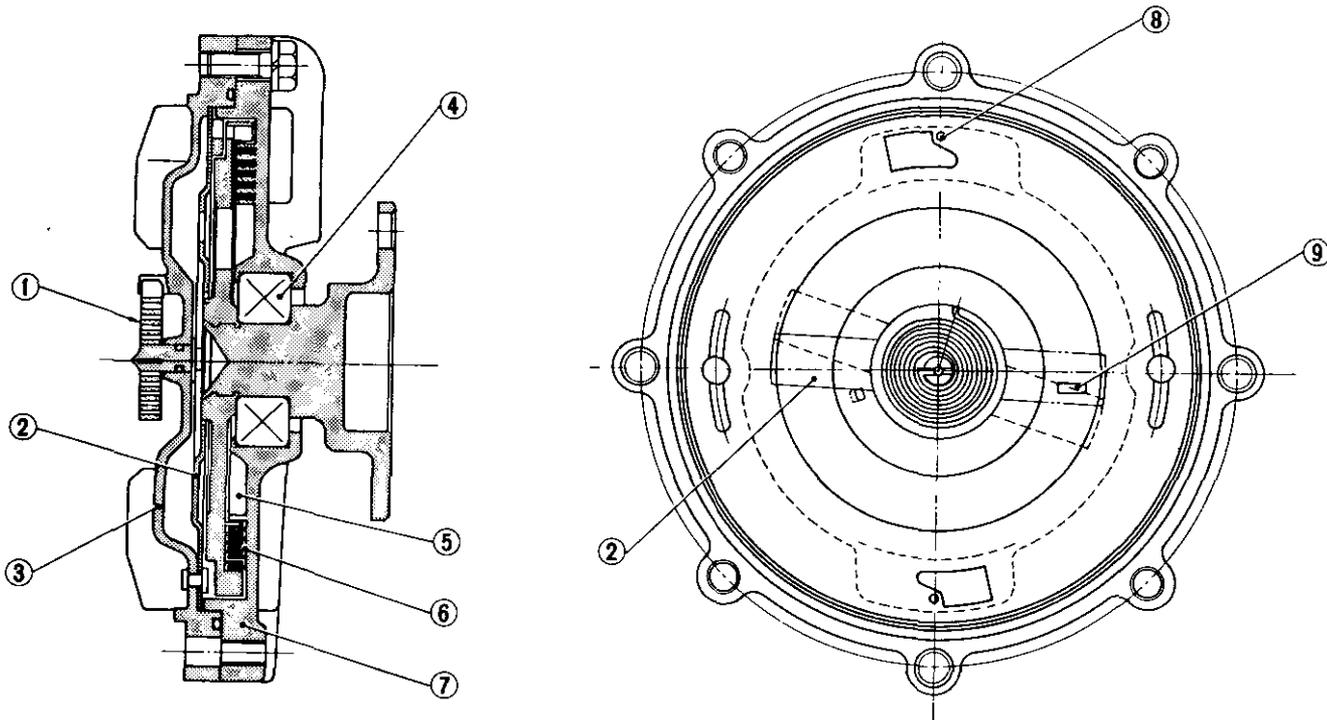

- | | |
|-----------------------------|-----------------------------|
| 1 Bi-metal thermostat | 6 Coupling part (labyrinth) |
| 2 Slide valve | 7 Driven part |
| 3 Reserve chamber for "OFF" | 8 Pump unit oil outlet |
| 4 Bearing | 9 Oil inlet |
| 5 Driving chamber | |

CO040

Fig. CO-4 Cross-sectional view of Tem-coupling

Tem-coupling is a type of fan coupling which is provided with a temperature control system.

The conventional coupling always slips the fan at a high speed under a constant ratio regardless of the engine cooling requirement.

The slipping ratio of the Tem-coupling, however, is properly changed with the cooling requirement.


"ON" denotes that cooling is required and the fan operates up to about 2,450 rpm. When high cooling is not required (during cold season, with the engine warmed up, etc.), the operation is placed under "OFF" condition and the fan slips at about 1,600 rpm.

The coiled bimetal thermostat installed on the front center portion of the Tem-coupling detects temperature

of air passing through the radiator (The air temperature is directly relative to the engine coolant temperature.) and the inside slide valve is opened or closed as required, and thus, the ON-OFF control is performed. When the air temperature rises, the bimetal is expanded, and the valve is opened, silicon oil is forwarded to the groove that transmits torque, and the system is placed under "ON" condition.

When the valve closes, silicon oil is not supplied to the groove, oil in the groove is accumulated on the Tem-coupling periphery due to the centrifugal force, and led into the reserve chamber. Now, oil is eliminated from the groove, and the system is placed under "OFF" condition.

With this system, when fan cooling is not required, the output loss is minimized and noise can be far reduced.

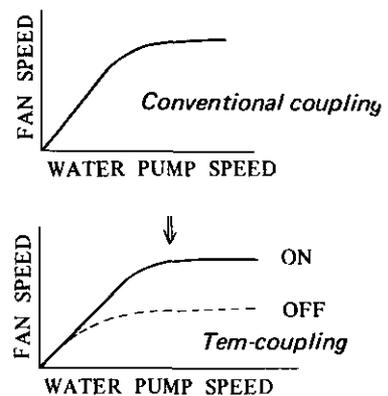

CO029

Fig. CO-5 Characteristic of Tem-coupling

Cooling System

INSPECTION

Check Tem-coupling for oil leakage or bend of bimetal.

If the above symptoms are found, replace it with a new one as an assembly.

THERMOSTAT

A wax pellet type thermostat is mounted in the thermostat housing at the cylinder head water outlet.

The function of the thermostat is to control the flow of coolant, facilitating fast engine warm up and regulating coolant temperature. The thermostat is designed to open and close at predetermined temperatures and if not operating properly should be removed and tested as described below.


REMOVAL AND INSTALLATION

1. Drain coolant partially.
2. Disconnect upper radiator hose at water outlet.
3. Loosen two securing nuts and remove water outlet, gasket, and thermostat from thermostat housing.
4. After checking thermostat,

reinstall, replacing with a new housing gasket.

5. Reinstall water outlet and tighten securing nuts.

6. Replenish coolant and check for leaks.

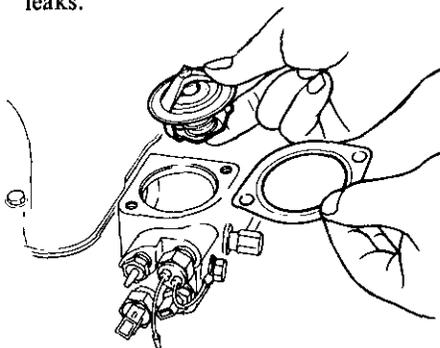

CO061
Fig. CO-6 Removing thermostat


INSPECTION

A sticking thermostat will prevent the cooling system from functioning properly. If the thermostat sticks in the open position, the engine warms up very slowly. If the thermostat sticks in the closed position, overheating will result. Therefore, the thermostat should be inspected to make sure that it is in good condition.

1. Submerge thermostat in hot water 5°C (9°F) above the temperature specified in the following table.

2. After preparing for the marked screwdriver at about 8 mm (0.315 in) from the tip, inspect the lift height of valve by inserting it.

3. Now, place thermostat in water 5°C (9°F) below the specified temperature.

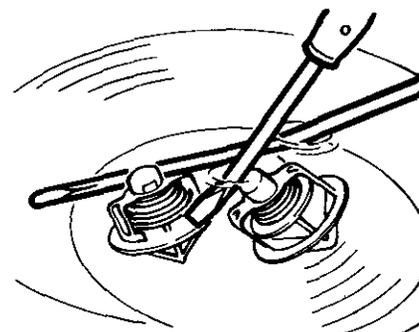

CO011

Fig. CO-7 Inspecting thermostat

If thermostat does not operate at the above specified temperature, it must be replaced because it cannot be repaired.

	Standard	For cold areas	For tropical areas
Valve opening temperature	82°C (180°F)	88°C (190°F)	76.5°C (170°F)
Max. valve lift	above 8 mm at 95°C (0.315 in at 203°F)	above 8 mm at 100°C (0.315 in at 212°F)	above 8 mm at 90°C (0.315 in at 194°F)

Note: It is necessary to check a new thermostat before installing it in the engine.


RADIATOR

The radiator is a conventional down flow type having top and bottom tanks to distribute the coolant flow uniformly through the vertical tube of radiator core. The radiator shroud improves fan performance (only for the model equipped with air conditioner).

The radiator filler cap is designed to

maintain a pre-set pressure [0.9 kg/cm² 13 psi) above atmospheric pressure.

The relief valve consisting of a blow-off valve and a vacuum valve, helps to prevent the coolant from boiling by giving pressure to it. However, when the pressure is reduced below atmospheric pressure, the vacuum valve allows air to re-enter the radiator preventing the formation of a vacuum in the cooling system. The bottom tank on cars equipped with automatic transmission incorporates an oil cooler for the transmission fluid.

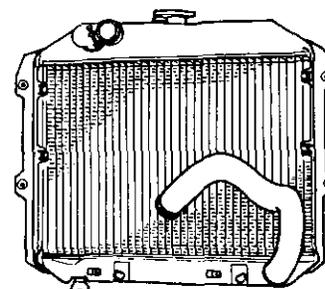

CO012

Fig. CO-8 Radiator for manual transmission

Cooling System

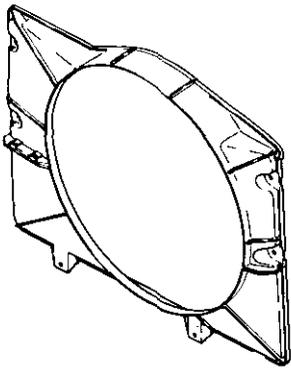


Fig. CO-9 Radiator shroud
(for the model equipped
with air conditioner)

REMOVAL AND INSTALLATION


1. Drain coolant into a clean container.
2. Disconnect radiator's upper and lower hoses.
3. Remove radiator lower shroud attaching bolts and then remove lower shroud downward (for the model equipped with air conditioner).
4. On a car with automatic transmission, disconnect cooler inlet and outlet lines from radiator.
5. Remove radiator retaining bolts and then remove radiator upward.

On a car with air conditioner, remove radiator along with upper shroud upward.

6. Install radiator in the reverse sequence of removal.

INSPECTION

Radiator cap should be checked for working pressure at regular tune up intervals. First, check rubber seal on cap for tears, cracks or deterioration after cleaning it. Then, install radiator cap on a tester. If cap does not hold or will not release at the specified pressure, replace cap.

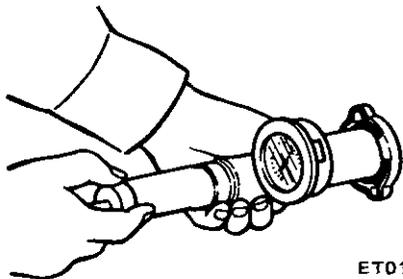

ET012

Fig. CO-10 Testing radiator cap

Also, inspect radiator for water leakage using cap tester and applying a pressure of 1.6 kg/cm² (22.8 psi).

If a defect is detected, repair or replace radiator.


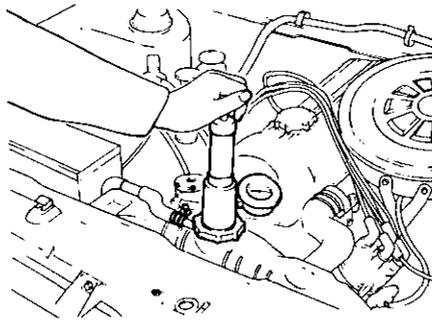


Fig. CO-11 Testing radiator
pressure

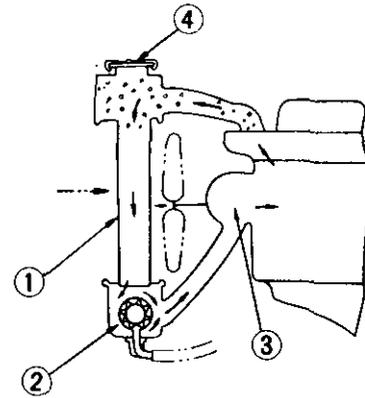

1 Radiator 3 Water pump
2 Oil cooler 4 Cap for water supply
CO038


Fig. CO-12 Structural view of
cooling system

RADIATOR RESERVOIR TANK (Except Canada)

OPERATION


The radiator reservoir tank is mounted to the right hand side core support through the bracket. When the coolant temperature in the radiator

rises and pressure builds up to an extent, the pressure relief valve provided in the radiator cap opens to release excess coolant into the reservoir tank. When the coolant temperature lowers and pressure decreases in the radiator, the vacuum valve provided in the radiator cap opens to allow the coolant to re-enter the radiator.

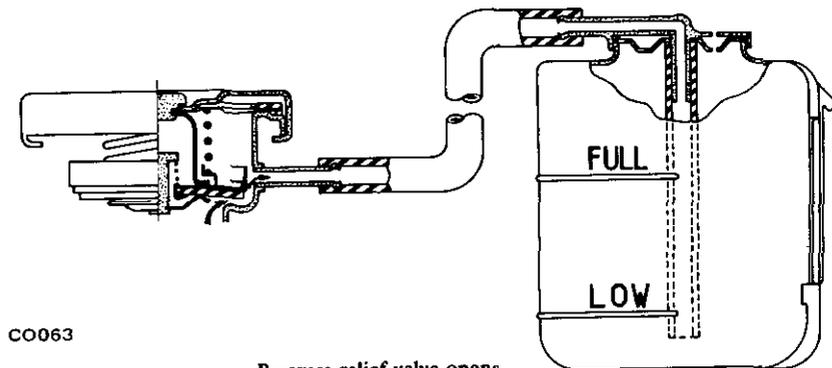

CO063

Pressure relief valve opens

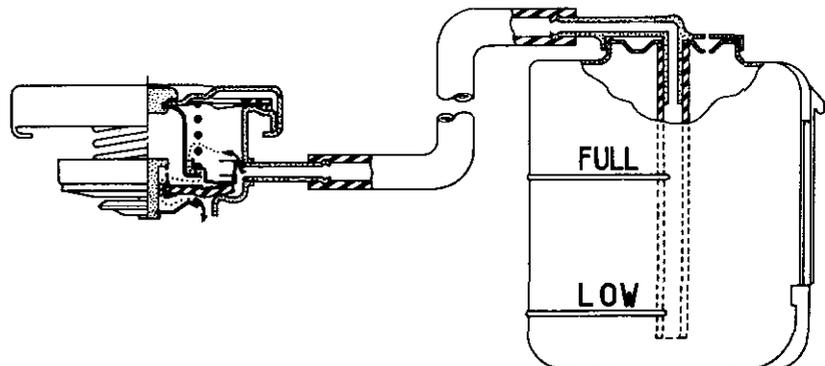

CO064

Vacuum valve opens

Fig. CO-13 Operation of reservoir tank

Cooling System

INSPECTION

Open reservoir tank cap and check coolant level. If the coolant level is lower than Low level, add coolant to that level. If reservoir tank is empty, check coolant level in radiator. If coolant is insufficient, add coolant into reservoir tank to half full position. Do not add coolant directly into radiator, but into reservoir tank to half full capacity.

Never add coolant cover High level position of reservoir tank; otherwise coolant may overflow from tank.

REMOVAL AND INSTALLATION

Upper side of reservoir tank bracket is bolted to radiator core support together with radiator. Lower side is bolted to radiator core support with stud bolts.

Reservoir tank is only inserted to reservoir tank bracket and can be easily removed.

To install reservoir tank, reverse the order of removal.

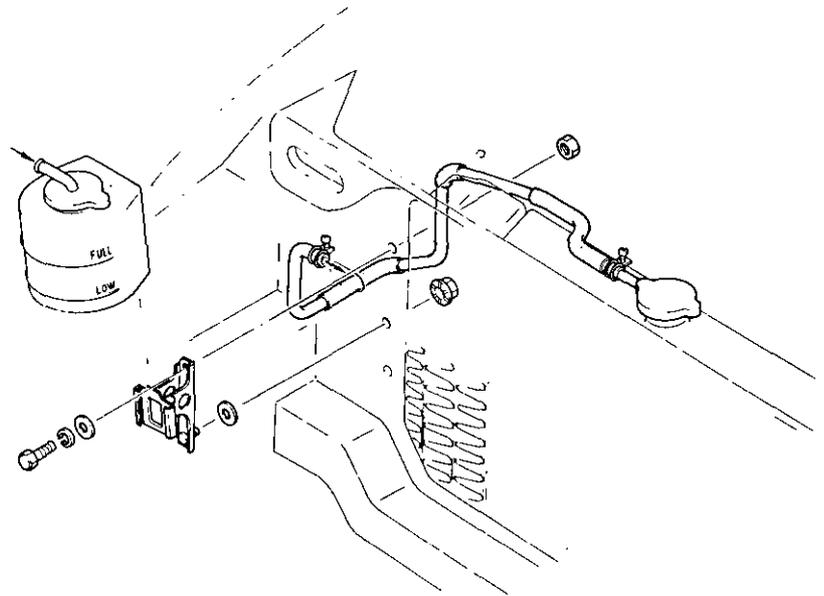


Fig. CO-14 Installing reservoir tank

SPECIFICATIONS

Engine			L28
Radiator			
Type			Corrugated fin and tube
Cap relief pressure	kg/cm ² (psi)		0.9 (13)
Testing pressure	kg/cm ² (psi)		1.6 (23)
Water capacity (including engine, heater and reservoir tank)	liter (U.S. qt, Imp. qt)		10.4 (11, 9½)
Fan			
Tem-patrol			Installed
No. of blades x outer diameter	mm (in)		8 x 410 (16.14)
Thermostat			

	Standard	For cold area	For tropical area
Valve opening temperature	82°C (180°F)	88°C (190°F)	76.5°C (170°F)
Max. valve lift	above 8 mm at 95°C (0.315 in at 203°F)	above 8 mm at 100°C (0.315 in at 212°F)	above 8 mm at 90°C (0.315 in at 194°F)

TROUBLE DIAGNOSES AND CORRECTIONS

Condition	Probable cause	Corrective action
Loss of water	Damaged radiator seams. Leaks at heater connections or plugs. Leak at water temperature gauge. Loose joints. Damaged cylinder head gasket. Cracked cylinder block. Cracked cylinder head. Loose cylinder head bolts.	Repair. Repair. Tighten. Tighten. Replace. Check engine oil for contamination and refill as necessary. Replace. Check engine oil in crankcase for mixing with water by pulling oil level gauge. Replace. Tighten.
Poor circulation	Restriction in system. Insufficient coolant. Inoperative water pump. Loose fan belt. Inoperative thermostat.	Check hoses for crimps, and clear the system of rust and sludge by flushing radiator. Replenish. Replace. Adjust. Replace.
Corrosion	Excessive impurity in water. Infrequent flushing and draining of system.	Use soft, clean water. (rain water is satisfactory). Cooling system should be drained and flushed thoroughly at least twice a year. Permanent antifreeze (Ethylene glycol base) can be used throughout the seasons of a year.
Overheating	Malfunctioning thermostat. Radiator fin choked with mud, chaff, etc. Incorrect ignition and valve timing. Dirty oil and sludge in engine. Inoperative water pump. Loose fan belt. Restricted radiator. Inaccurate temperature gauge. Impurity in water.	Replace. Clean out air passage thoroughly by using air pressure from engine side of radiator. Adjust. Refill. Replace. Adjust. Flush radiator. Replace. Use soft, clean water.
Overcooling	Malfunctioning thermostat. Inaccurate temperature gauge.	Replace. Replace.



509 Debby Lane
Adamsville, AL 35005
<http://www.zcarcreations.com>
cborden@zcarcreations.com

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Z Car Creations, LLC grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Z Car Creations, LLC and its structure and organization, all graphics and coding are considered intellectual property of Z Car Creations, LLC. The manual content itself is property of Nissan Motors. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Z Car Creations, LLC for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Z Car Creations, LLC makes no warranty as to its use or performance. Z CAR CREATIONS, LLC DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL Z CAR CREATIONS, LLC BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.



509 Debby Lane
Adamsville, AL 35005
<http://www.zcarcreations.com>
cborden@zcarcreations.com

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Alabama, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Z Car Creations, LLC.

Craig Borden
Z Car Creations, LLC
509 Debby Lane
Adamsville, AL 35005
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.